


ADVANCE FLOORING SYSTEMS – MULTIZONE ANTI-FATIGUE MATTING INSTALLATION INSTRUCTIONS

- 1) Orientate the tiles and ramps so the joiners on the ramps correspond with the correct joiner on the tile.
The male joiners fit female joiners and vice versa.
The picture below details a male ramp, which will join the female side of the ramp.

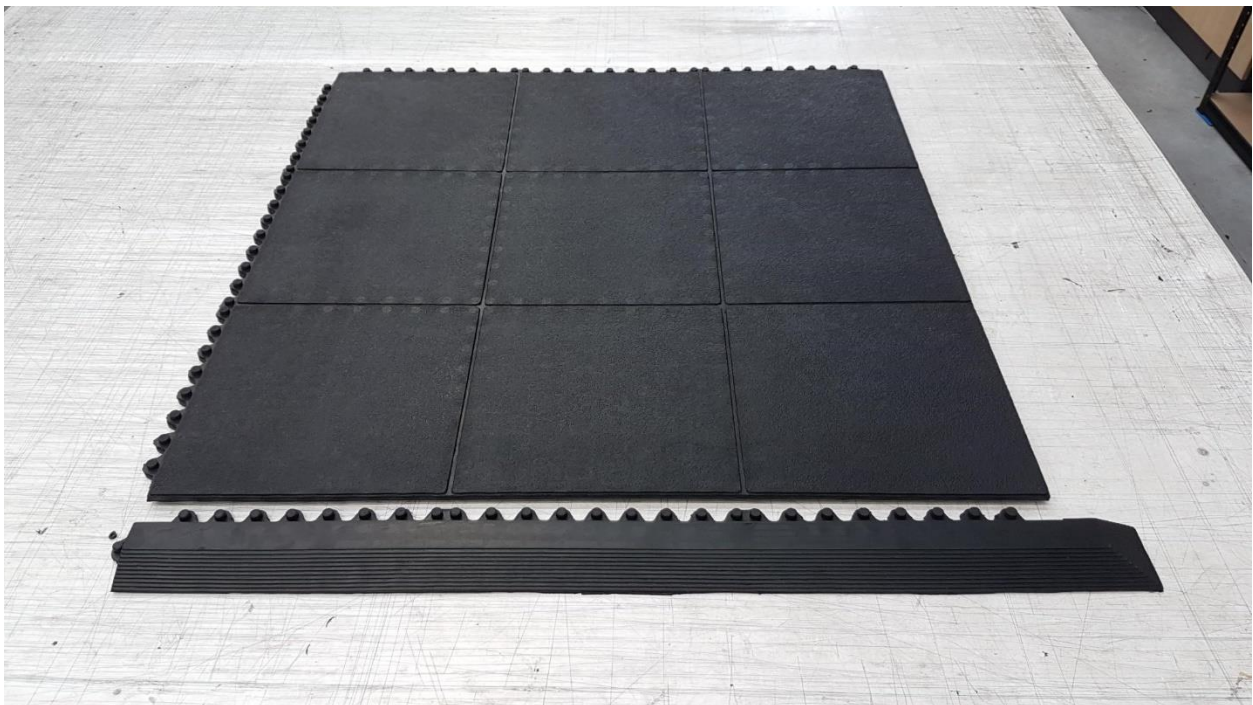

2) Turn the ramp over to show the reverse side.



3) The cut line on the right hand side indicates where the ramp should be cut. Use a sharp knife and a straight edge to cut this safely.



- 4) The cut ramp should like the image below, with a clean cut allowing it to butt to the end of the next ramp.



- 5) Clip on the ramp to the tile as shown below:

